


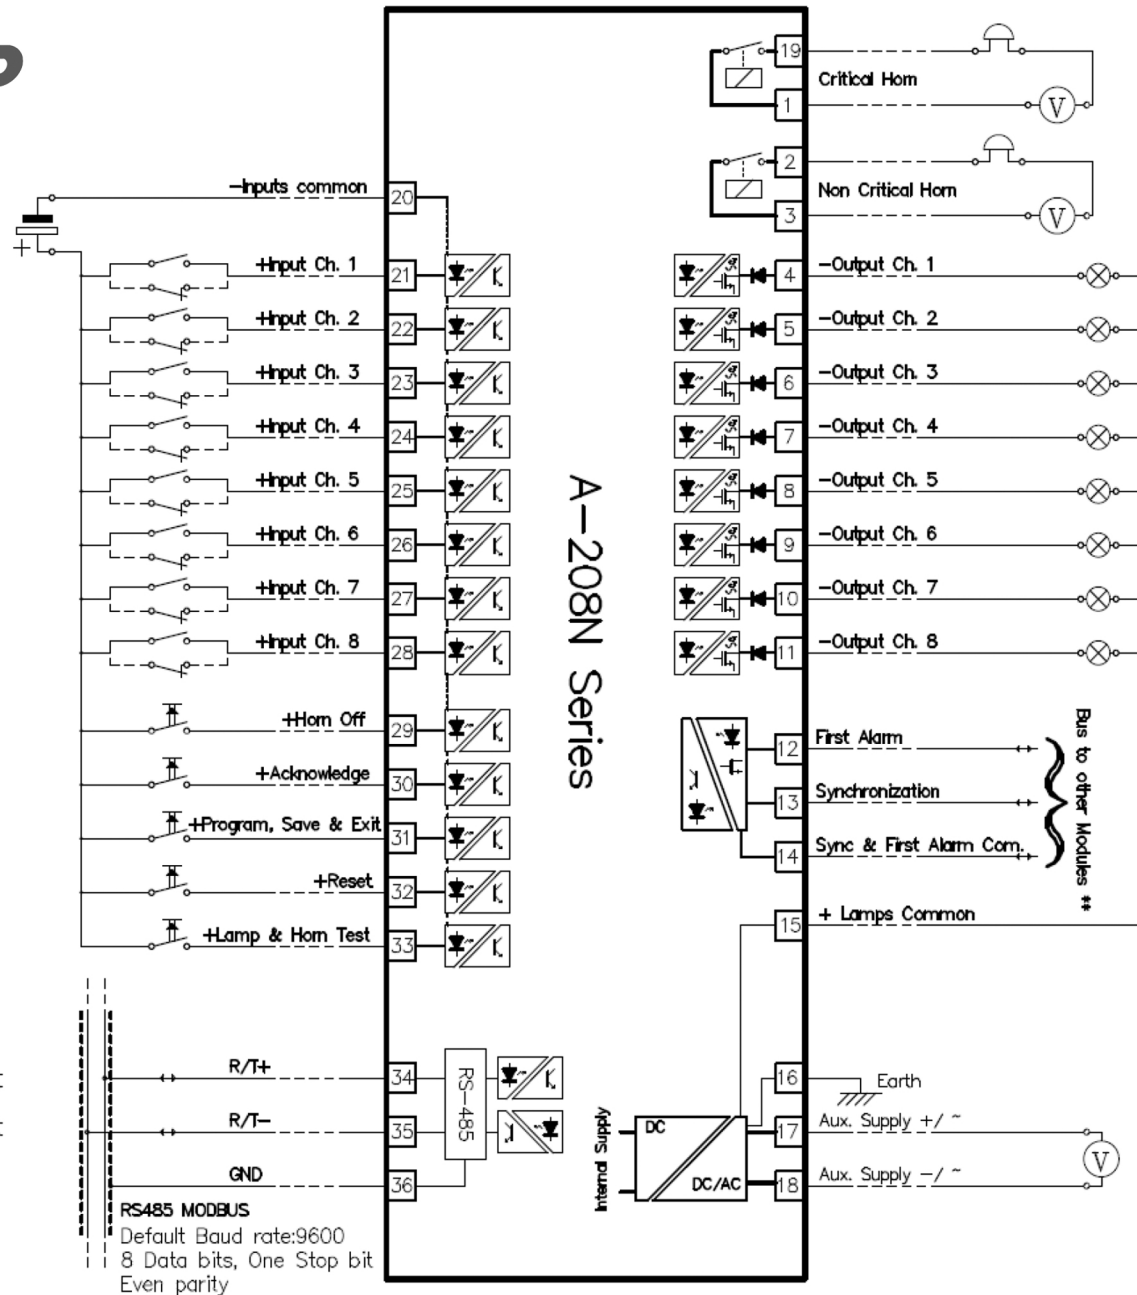

** For First Alarm & Synchronization in all Modules these terminals must be connected to similar terminals in the other modules (12 to 12... & 13 to 13... in DC Aux. Supply) & (12 to 12... & 13 to 13... & 14 to 14... in AC Aux. Supply)

Faryand Niru Pardaz

Alarm Annunciator Wiring

Customer			
Model	A-208N		
Date	2014/09/22	Rev.	V15-AC
Drawing No.	L1005	Sheet	1 of 1